

STX-RLINK power the board under test at 5Vcc.

On STX-RLINK must be present the jumpers:

SWIM
5V
ADAPT

External
Power from
8 to 18Vcc

ATTENTION:
Remove the jumper 5V if the board under test is powered externally.

Max Current from STX-RLINK
50mA at 5V

board under test

