









- Install the software MDK304a.EXE
- Unpack the file EasyWEB\_OK\_MCB-STR9.zip
- Start: Keil uVision3
   click on: Project
   Open Project an load the file easyweb.Uv2
- Compile the program by clicking the icon:
- Load the program by clicking on the icon:







• Configure your PC by selecting **Network Setting** on your network then click the **right button** select **Properties** 



For more info enrico.marinoni@avnet.com





Ger

#### Select **TCP / IP** and then click on **PROPERTIES**

Change the IP address as show below

#### **IP Address:** 192.168.0.102 Subnet mask: 255.255.255.0

Local Area Conn	ection Properties	ſ	2 🗙
General Authenticatio	on Advanced		
Connect using:			
🕮 Broadcom Net	Ktreme Gigabit Etherne	Configure	
This connection uses	the following items:		
Client for Mic Client for Mic Eacfilt Driver File and Prin Thernet Prot	crosoft Networks r ter Sharing for Microsoft I ocol (TCP/IP)	Networks	
I <u>n</u> stall	<u>U</u> ninstall	P <u>r</u> operties	
Description Transmission Cor wide area petwo	nternet Protocol (1	CP/IP) Proper	ties 🦻 🔀
across diverse in	General		
Show icon in no Notify me when Notify me when			
	Obtain an IP address automatically     Outright of the following IP address:		
	IP address:		192.168.0.102
	Subnet mask:		255.255.255.0
	Default gateway:		····
	O Obtain DNS serv	ver address autom	atically
	Output the following DNS server addresses:		
	Preferred DNS server:		
	Alternate DNS serv	er:	
			Advanced
			OK Cancel

ico.marinoni@ava





Open a **Web Browser** (Internet Explorer, Mozilla ecc) and inset the addres below

http://192.168.0.100

There must appear to the right

page and then pressing /INT5 or INT6

will be displayed on the PC screen the status of INT5 and INT6



