

SILICA STDay SW to install on your PC

By E.M.

First, do the download of:

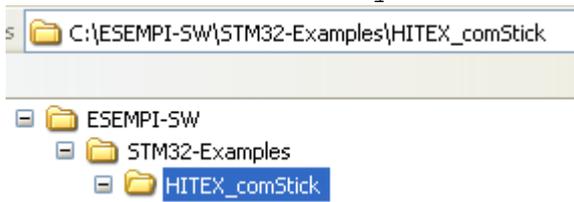
- 1) SW for STM8 EndZone
- 2) SW for STM32 EndZone

whose links are on the page where you got this document (<http://emcu.altervista.org/SILICA-STDay.html>).

Then follow the explanations below.

STM32

Install:

- The CD contained in STM32-comStick.
The installation procedure is on the page [D:\install-software.html](#)
Under Windows Vista the disk could not start automatically, if that happens go to the directory of your DVD and click twice on the page mentioned above.
- Create the directory structure:


```
s C:\ESEMPI-SW\STM32-Examples\HITEX_comStick
```
- Copy the example of HITEX, [SYSTICK blinking LED application with GNU](#), into HITEX_comStick directory.
- Enter in the directory, [SYSTICK blinking LED application with GNU](#), and unzip the file.
- Create the directory [Proval](#) under `...\HITEX_comStick`

STM8

Install:

- STM IDE: [sttoolset.exe](#)
- STM Library: [stm8sfwlib.zip](#)
- COSMIC C Compiler: [cxstm8_16k.exe](#)
The license file [license.lic](#) must be copy into the **License** directory that is under the **COSMIC** installation.
- RAISONACE:
[Ride7_BN55.exe](#)
[RKit-STM8_BN87.exe](#)